


Schwank ThermoControl Plus Temperature Sensor




Resistance Sensor Characteristics

Sensor senses ambient air and mean radiant temperatures; averaged signal sent to controller.

°F	OHM
32	14324
34	13539
36	12802
38	12110
40	11460
42	10848
44	10273
46	9732
48	9223
50	8744
52	8293
54	7867
56	7466
58	7088
60	6732
62	6395
64	6078
66	5778
68	5495
70	5227
72	4974
74	4735
76	4509
78	4295
80	4092
82	3900
84	3718
86	3546

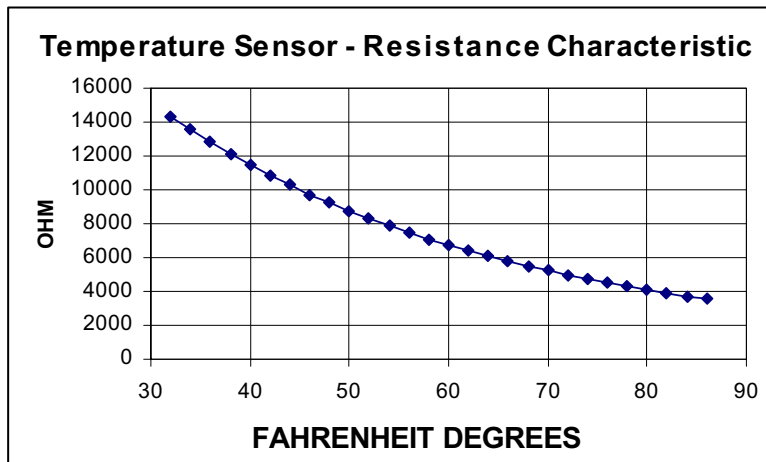

PART NUMBER:
JM-0505-XX

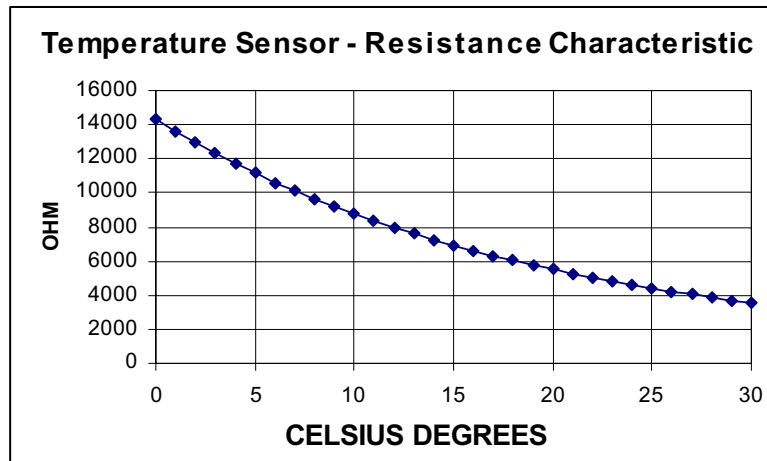

°C	OHM
0	14324
1	13615
2	12946
3	12313
4	11715
5	11149
6	10614
7	10107
8	9628
9	9174
10	8744
11	8336
12	7950
13	7584
14	7237
15	6907
16	6595
17	6298
18	6016
19	5749
20	5495
21	5253
22	5024
23	4805
24	4598
25	4400
26	4212
27	4033
28	3863
29	3701
30	3546

